


Basic Specifications for DC500VBC625A Series

SOC product name DC500VBC625A “Rated current”

Dimensions and construction

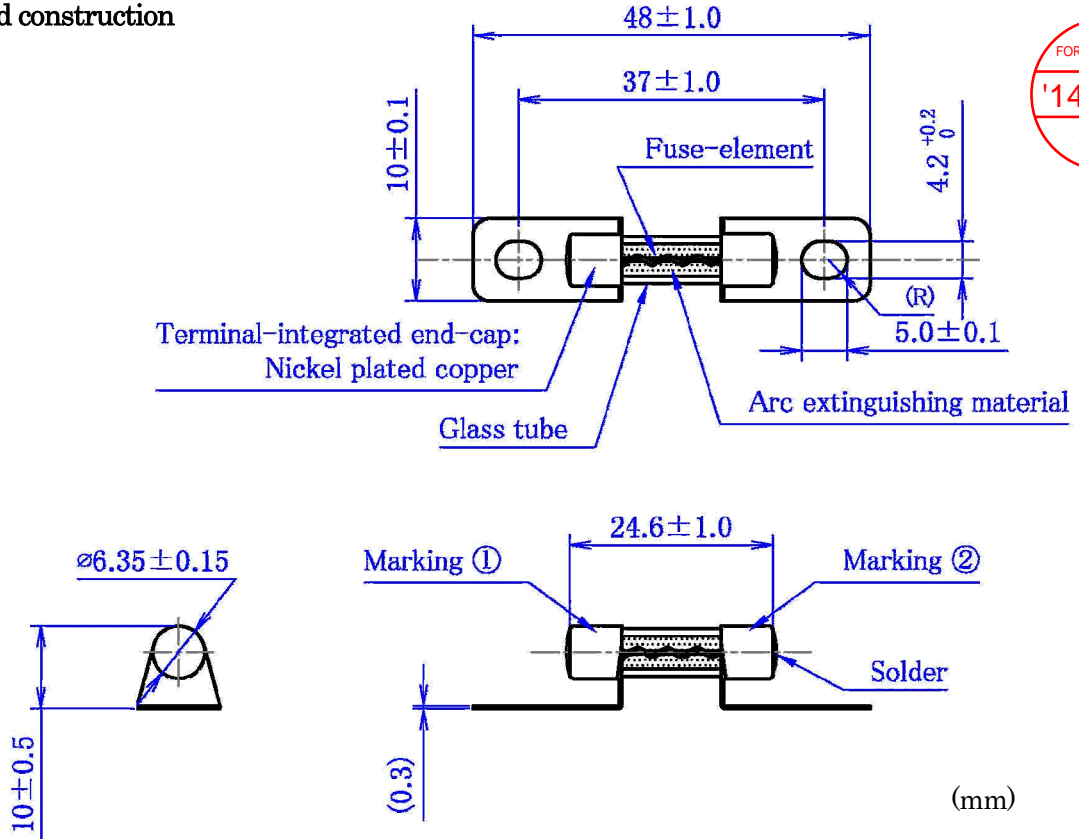

Marking

Marking ①: DC500V A

Marking ②: SOC “Rated current”

Electrical characteristics

Rated voltage	Rated current (I _N)	Rated breaking current		Minimum breaking current (*1)	Temperature rise	Current carrying capacity	Overload operation
DC500V	5A	1000A	Resistive circuit	10A	Not more than 75K at 0.5 I _N on the external surface of the fuse	1.0 I _N until temperature stabilization occurs.	Within 2min at 2.0 I _N
	10A			20A			
	15A			30A			
	20A			40A			
	25A			50A			
	30A			60A			
	35A			70A			

*1: “Minimum breaking current” is a minimum current value that this fuse can safely interrupt to open the resistive circuit of DC 500 V in which this fuse has been inserted. When this fuse has operated at the current value below this minimum breaking current, it may not safely open the circuit.

Environment-related substances

High melting temperature type solder containing 85 wt% or more lead is used in this product. However, lead contained in such high melting temperature type solder is exempted from the EU RoHS Directive restricting the use of certain hazardous substances in electrical and electronic equipment (2011/65/EU), and other hazardous substances restricted by the RoHS Directive (cadmium, hexavalent chromium, mercury, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE)) are not used intentionally in this product. This product, therefore, conforms to the EU RoHS Directive. Lead content as impurities is not more than 0.1 wt%.

Mounting conditions

Mounting bolt: M4 bolt (Using plain washers as specified in JIS B 1256 is recommended.)
Tightening torque: $2 \pm 0.5 \text{ N}\cdot\text{m}$




Application of excessive stress on a fuse body may damage the fuse. Make sure to secure the fuse terminal area when you tighten a bolt.

Safety Precautions When Selecting and Using Fuses


Read and follow these precautions before selecting and using fuses.

 **WARNING :** Failure to properly select, install and use fuses can result not only in property damage but also serious injury and/or death.

■ Use fuses within their specification requirements.

 **WARNING :** Application of loads exceeding or outside the specification requirements may lead to nonoperation or nuisance operation of the fuse, disconnection of the fuse-element, and/or explosions, which may result in damage to property and/or bodily harm.

■ The electrical performance of the fuse may greatly vary depending on the various conditions of loads actually applied to it such as pulsed currents, ambient temperatures and thermal and mechanical stresses. Consider all load conditions to be applied to the fuse when selecting it.

 **WARNING :** The electrical performance of the fuse may be significantly affected by external stresses applied to it, which may cause nuisance operation of the fuse, disconnection of the fuse-element, and/or explosions, resulting in damage to property and/or bodily harm.

■ Use this fuse in DC circuits. Be aware that the breaking ability of this fuse will differ depending on whether the circuit is an AC or a DC circuit.

■ Check for appropriate operation of the fuse at the voltage of the circuit in which the fuse is to be inserted. Select a fuse whose rated voltage is higher than the voltage of the circuit. Even when the rated voltage of the fuse is higher than the voltage of the circuit, however, the fuse may not operate when the circuit voltage is too small.

■ Do not use a fuse where it can be exposed to high humidity, corrosive gas and/or flammable gas. Doing so may result in nuisance operations, disconnection of the fuse-element, or explosions.


■ Turn off all power leading to the fuse before touching it. Failure to do so may result in electric shocks and/or serious burns.

■ Before final fuse selection, always test the proposed fuse in your actual equipment to ensure that the fuse satisfies all your operational and safety requirements.

■ Use sample fuses only for evaluation. Do not reuse sample or other used fuses. Properly dispose of fuses in accordance with local laws and regulations.

I-t Curve

(For reference purposes only)

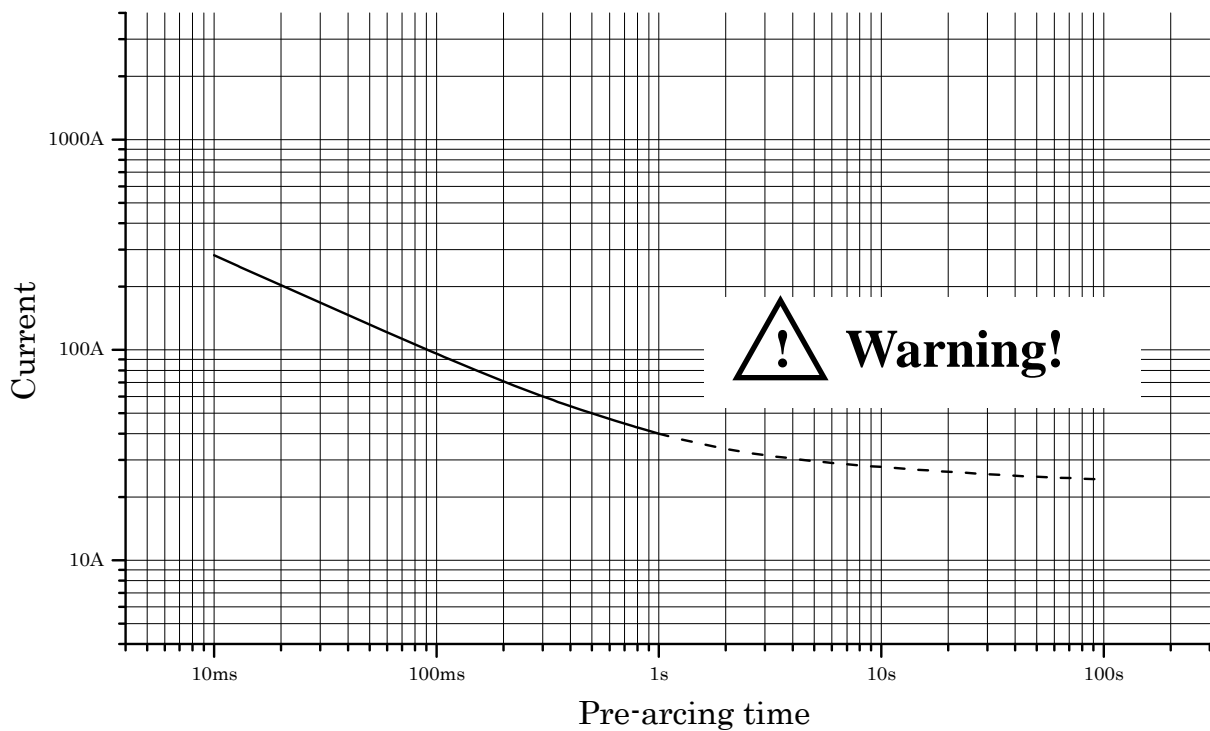**Note:**

- This I-t curve is a plot of the average values of measurements obtained under conditions specified by SOC.
- These data are for reference purposes only and are not intended to infer any guaranteed values.
- Fuse characteristics may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.


Warning:

When fusing occurs at a current that is less than the minimum breaking current (represented by the dotted portion of the above I-t curve), an arc current may continuously pass through the fuse, or a previously extinguished arc may reoccur causing an arc current, and it may therefore not be possible to break the current. Do not apply fusing conditions of currents less than the minimum breaking current to the fuse, as fires and other accidents may occur due to the inability to open the circuit.



I-t Curve

(For reference purposes only)

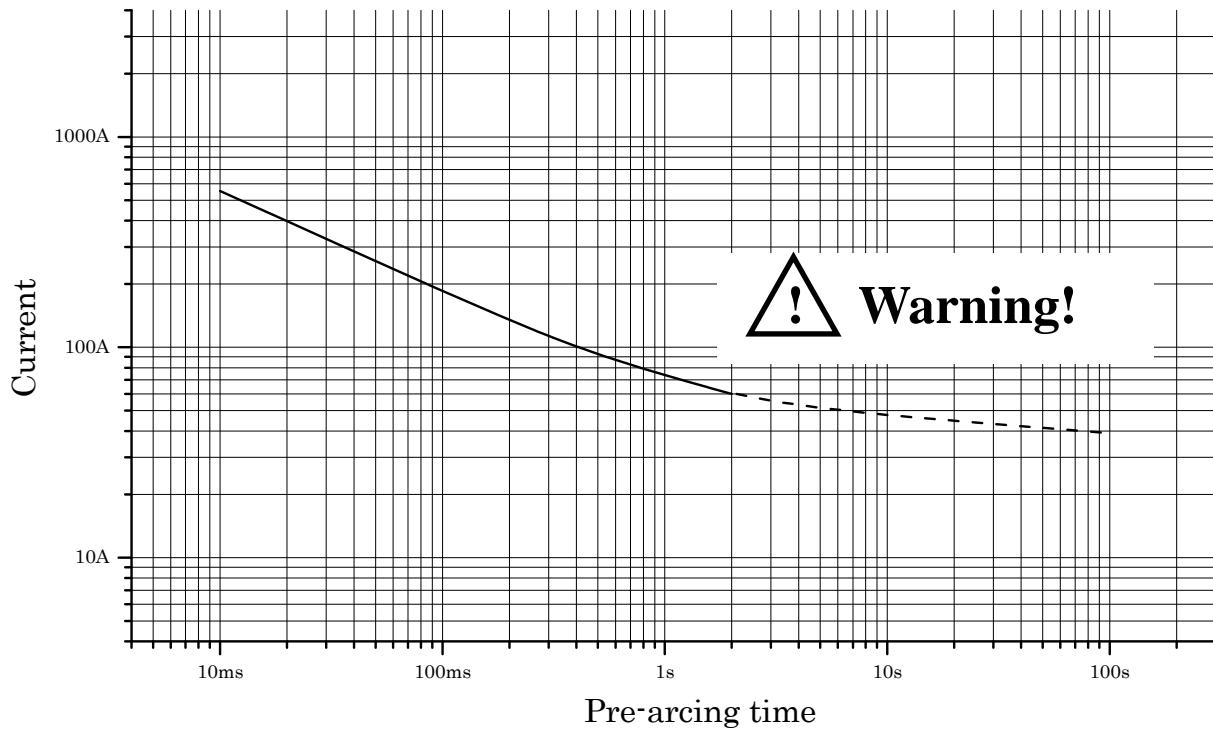

Note:

- This I-t curve is a plot of the average values of measurements obtained under conditions specified by SOC.
- These data are for reference purposes only and are not intended to infer any guaranteed values.
- Fuse characteristics may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.

Warning:

When fusing occurs at a current that is less than the minimum breaking current (represented by the dotted portion of the above I-t curve), an arc current may continuously pass through the fuse, or a previously extinguished arc may reoccur causing an arc current, and it may therefore not be possible to break the current. Do not apply fusing conditions of currents less than the minimum breaking current to the fuse, as fires and other accidents may occur due to the inability to open the circuit.




I²t-t Curve

このI²t-t特性図は、弊社が試験条件を特定して測定した実測値の平均値だけをプロットしてあります。参考値であり保証値ではありません。ヒューズの特性は、その使用条件により変化しますので、お客様にヒューズのご使用条件下で、ヒューズがお客様のご要求を満足しているかを実際にご確認頂く必要があります。

This I²t-t curve is a plot of the average values of the measurement obtained under the conditions specified by our company. These data are for reference only and are not intended to infer any guaranteed values. Characteristics of the fuse may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.

Type: DC500VBC625A 20A
Control No.: 130807

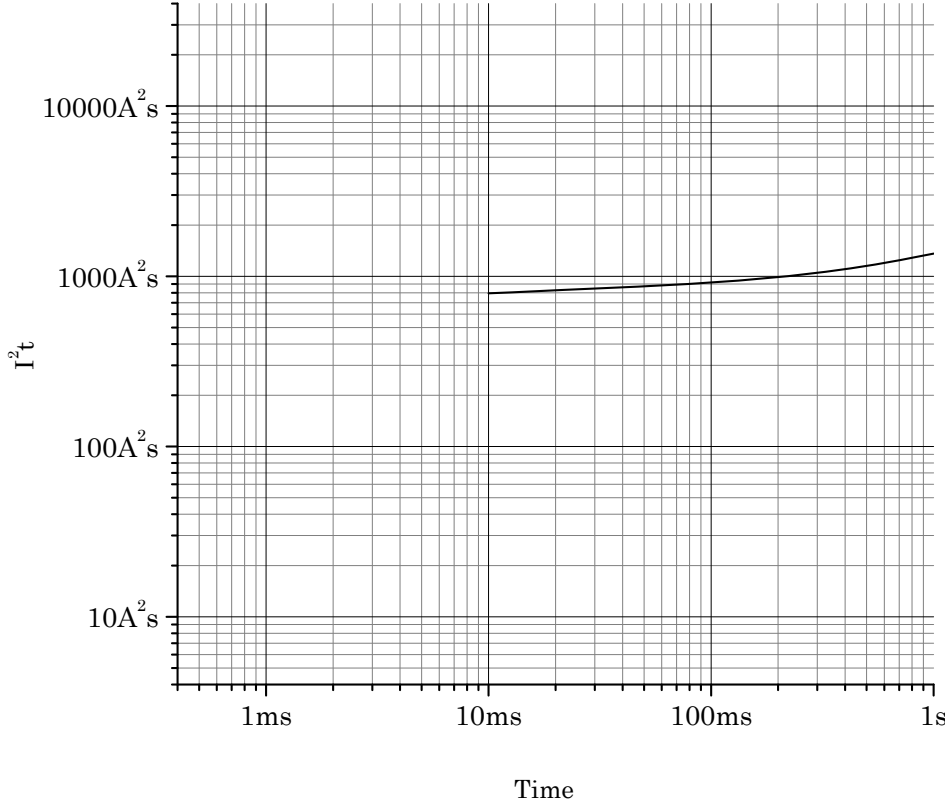


I²t-t Curve

このI²t-t特性図は、弊社が試験条件を特定して測定した実測値の平均値だけをプロットしてあります。参考値であり保証値ではありません。ヒューズの特性は、その使用条件により変化しますので、お客様にヒューズのご使用条件下で、ヒューズがお客様のご要求を満足しているかを実際にご確認頂く必要があります。

This I²t-t curve is a plot of the average values of the measurement obtained under the conditions specified by our company. These data are for reference only and are not intended to infer any guaranteed values. Characteristics of the fuse may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.

Type: DC500VBC625A 30A
Control No.: 130805

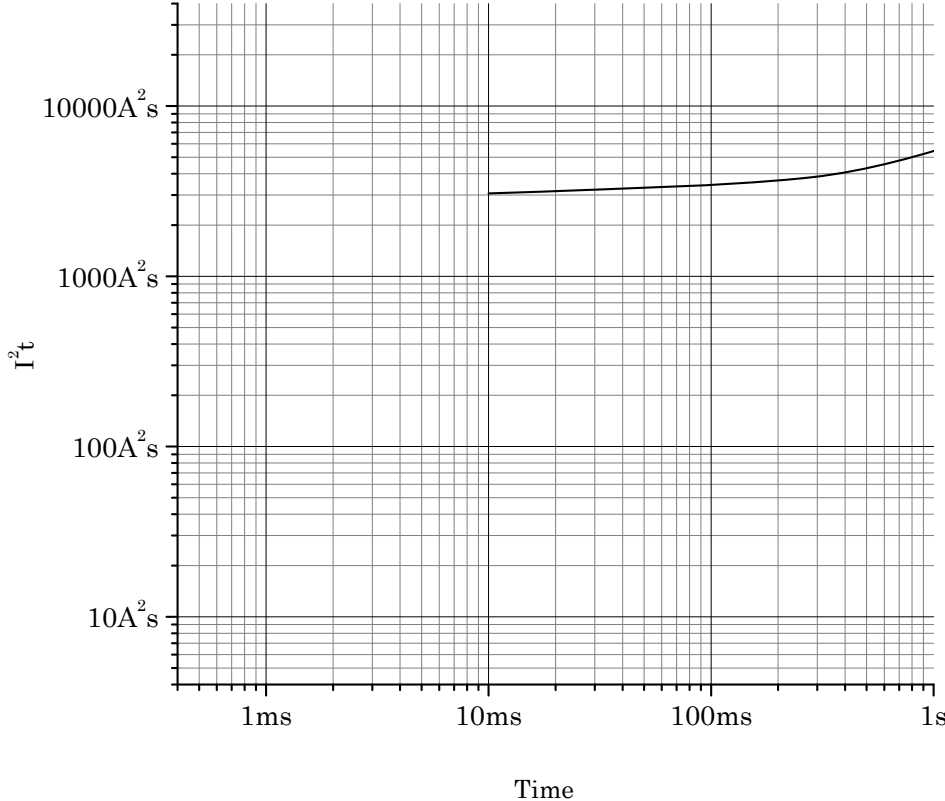

周囲温度の影響－定格電流値のリレーティング


Influence of Ambient Temperature - The Re-rating of the Rated Current

この周囲温度に対する定格電流の変化を示すグラフは、周囲温度-40℃、25℃及び 105℃に於いて弊社が特定した条件で測定した 3 点の実測値であり、お客様での実使用条件を考慮したものではありません。ヒューズの特性はその使用条件により変化しますので、お客様にヒューズのご使用条件下で、ヒューズがお客様のご要求を満足しているかを実際にご確認頂く必要があります。

This chart is a plot of the measurements obtained at the ambient temperatures of -40℃, 25℃ and 105℃ under the conditions specified by SOC; therefore, conditions of your actual application are not considered in this chart. These data are for reference purposes only and are not intended to infer any guaranteed values. Fuse characteristics may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.

Type: DC500VBC625A 20A

Control No.: 130827

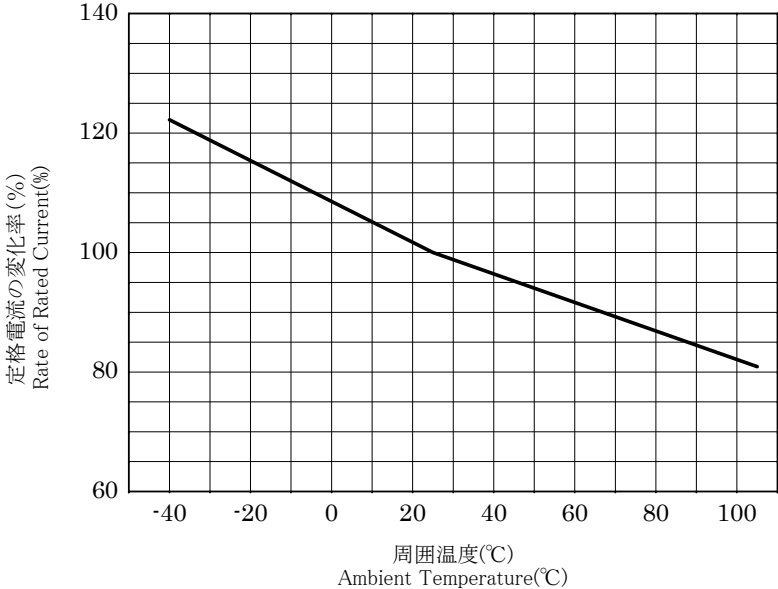


周囲温度の影響－定格電流値のリレーティング

Influence of Ambient Temperature - The Re-rating of the Rated Current

この周囲温度に対する定格電流の変化を示すグラフは、周囲温度-40℃、25℃及び 105℃に於いて弊社が特定した条件で測定した 3 点の実測値であり、お客様での実使用条件を考慮したものではありません。ヒューズの特性はその使用条件により変化しますので、お客様にヒューズのご使用条件下で、ヒューズがお客様のご要求を満足しているかを実際にご確認頂く必要があります。

This chart is a plot of the measurements obtained at the ambient temperatures of -40℃, 25℃ and 105℃ under the conditions specified by SOC; therefore, conditions of your actual application are not considered in this chart. These data are for reference purposes only and are not intended to infer any guaranteed values. Fuse characteristics may vary depending on the usage conditions. Always test the fuse in the circuit under the actual circuit conditions.

Type: DC500VBC625A 30A
Control No.: 130827

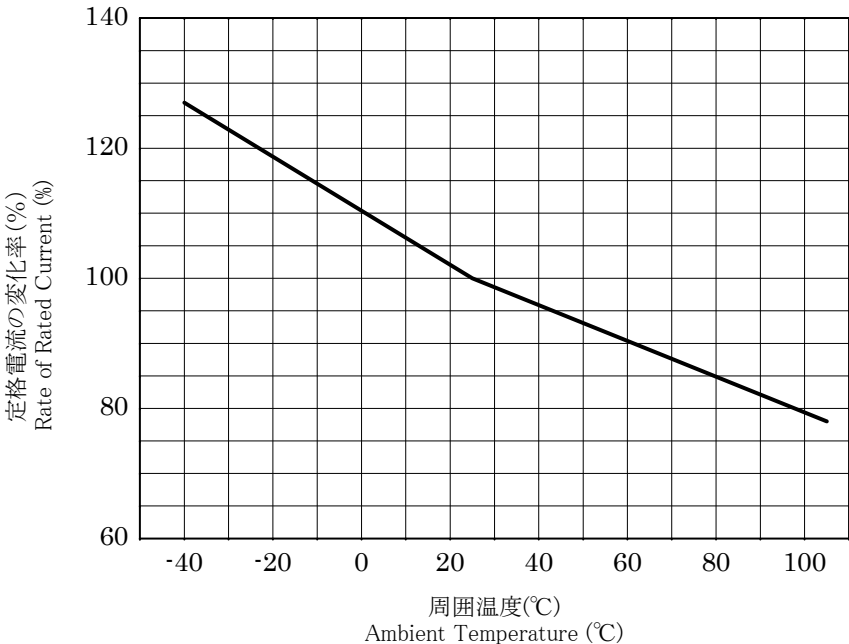

SOC Corporation

《Technical specification》 (DC500VBC625A)

1. Usage conditions

Ambient temperature: -40 °C—+105 °C

Note: Current carrying capacity of the fuse may vary depending on the ambient temperature.

Ambient humidity: 85 % RH or less

2. Typical cold resistance (for reference)

20 A: 5.0 mΩ

30 A: 2.9 mΩ

